






Ref.: 1543

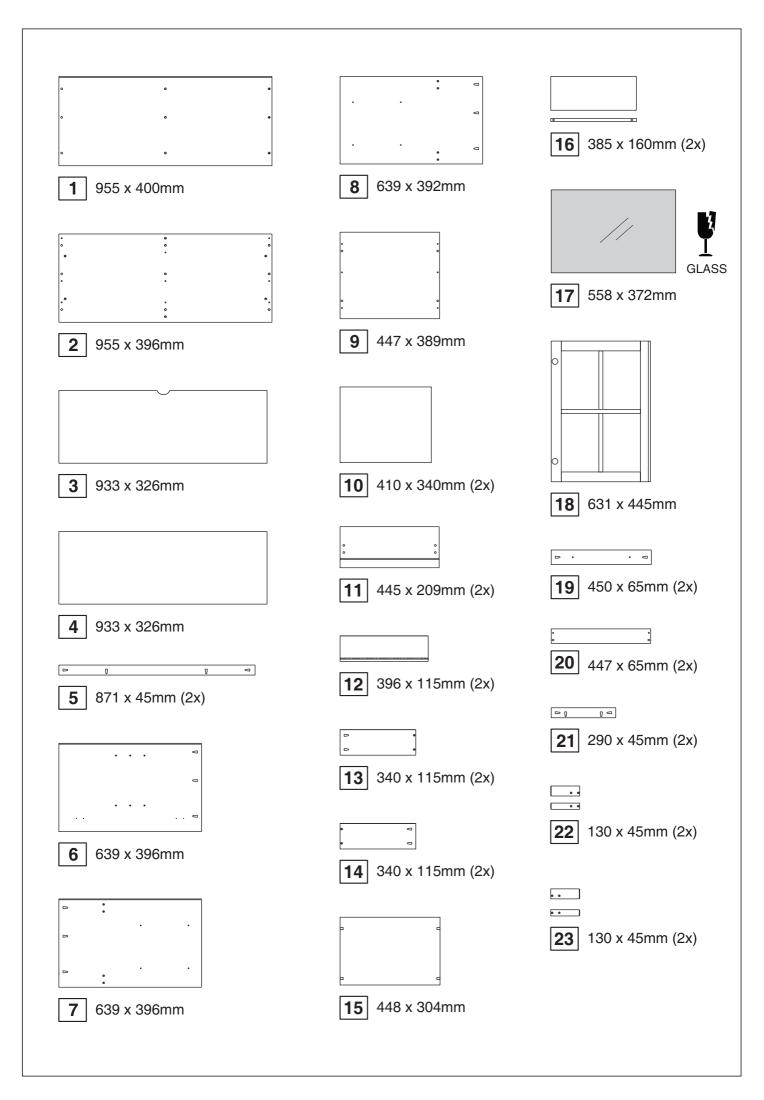


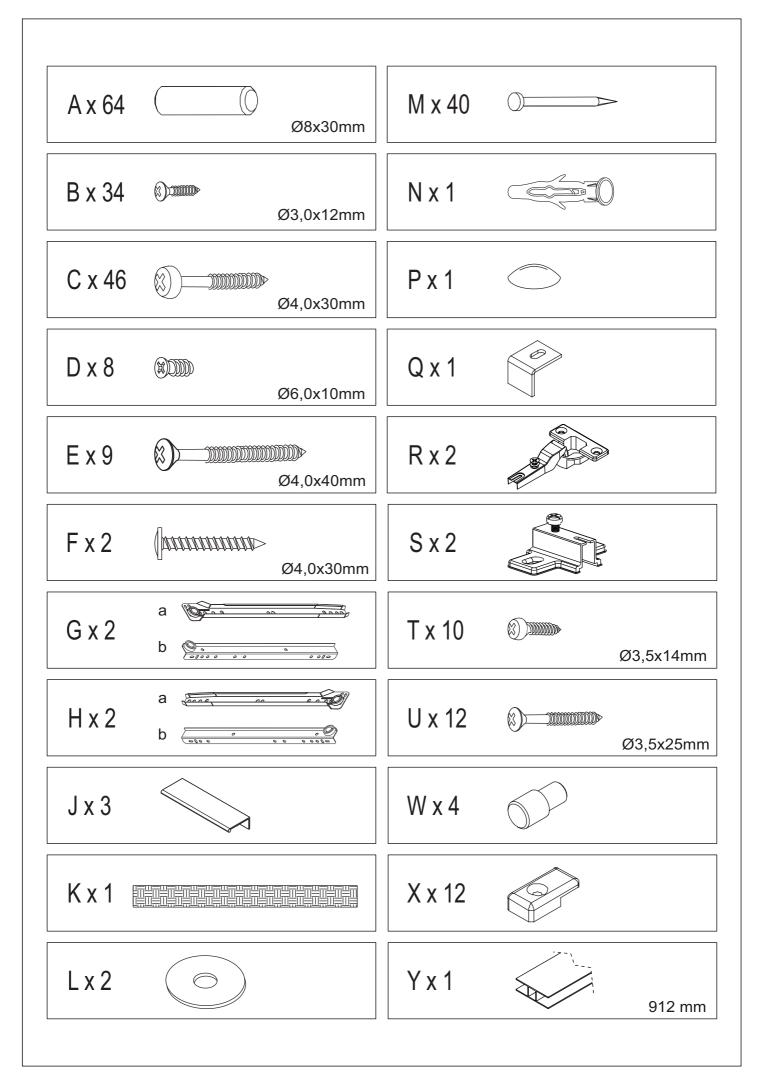


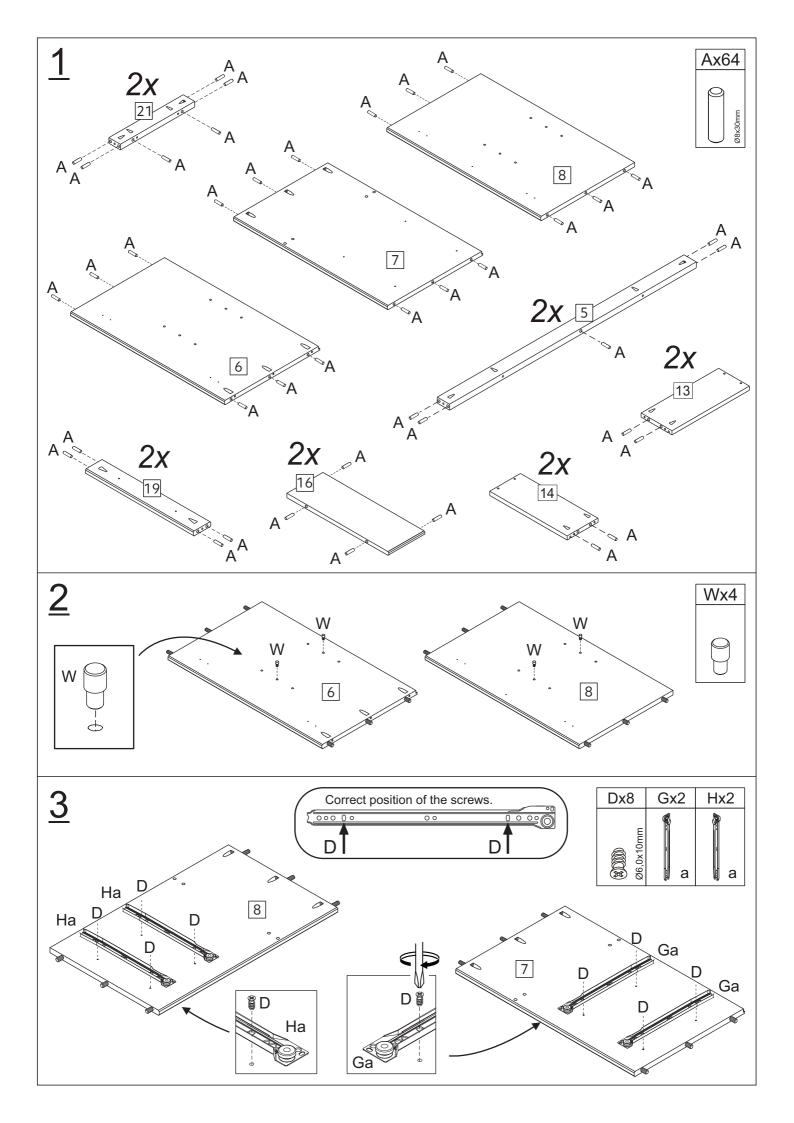


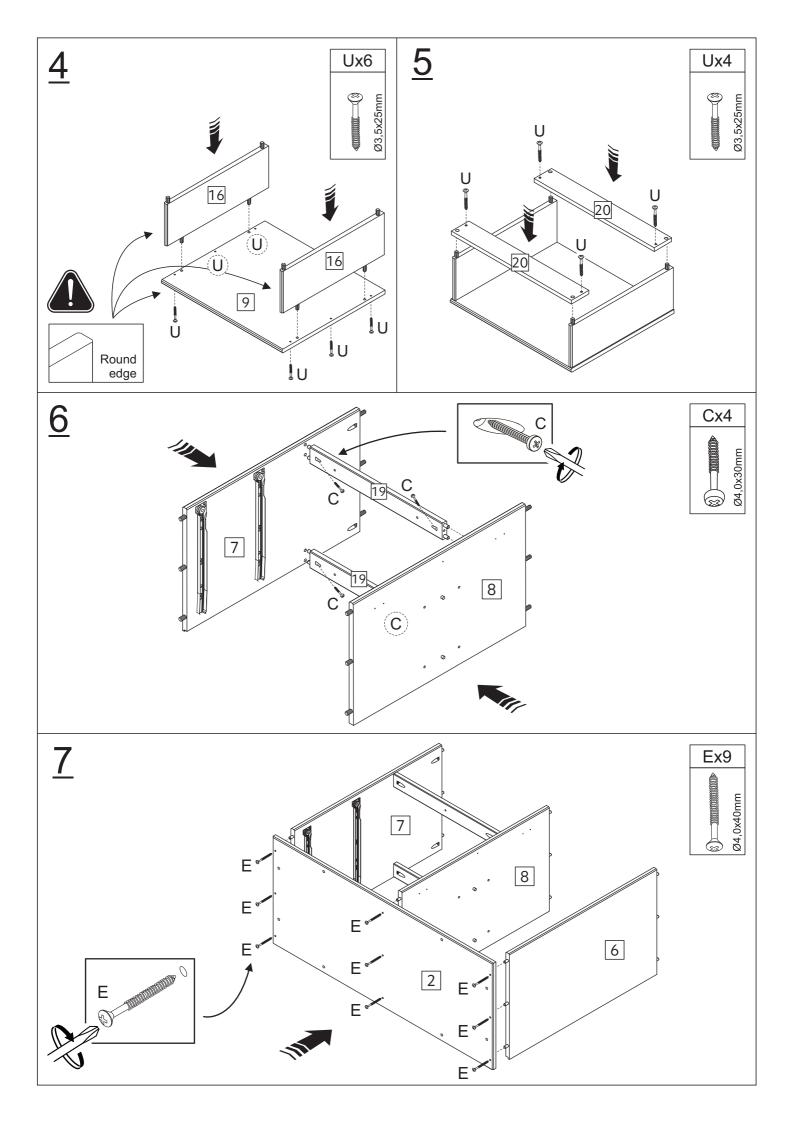

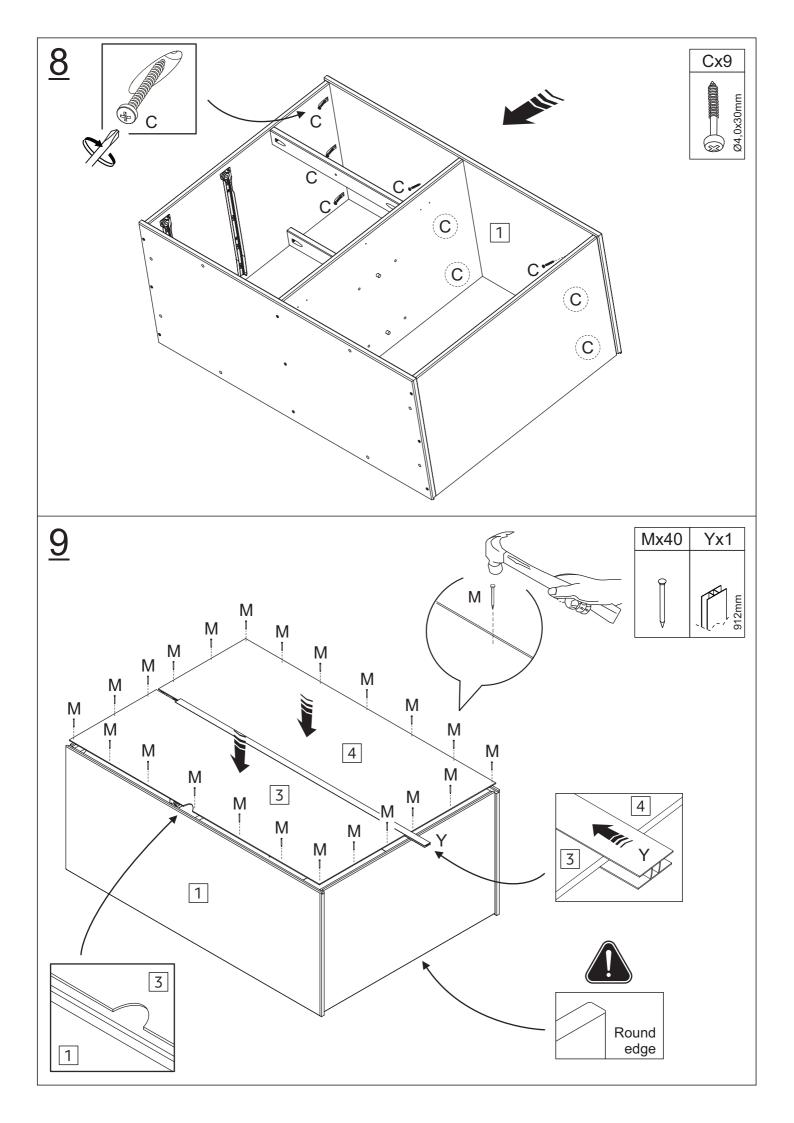

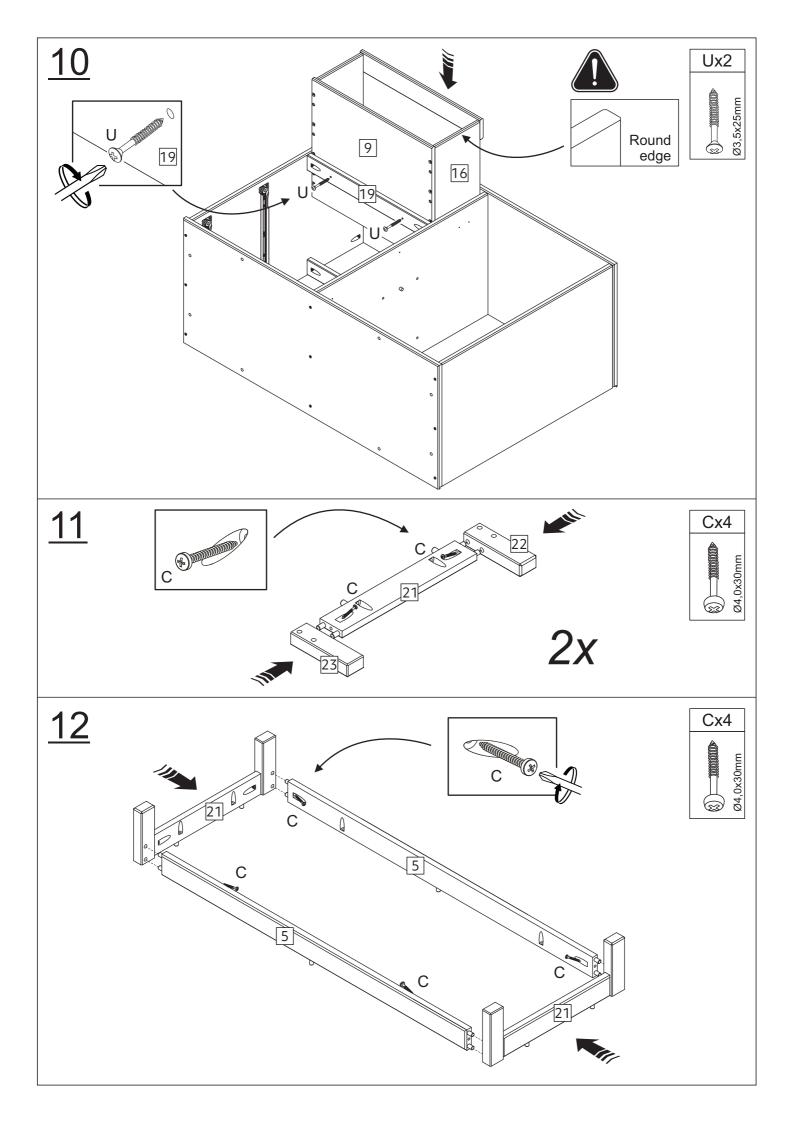

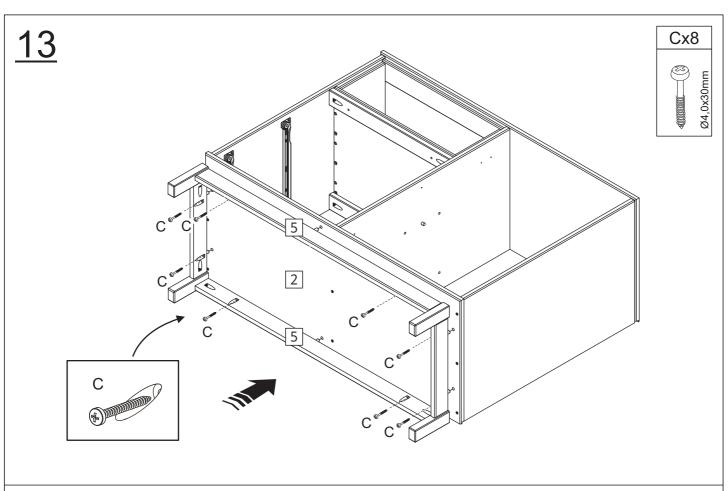

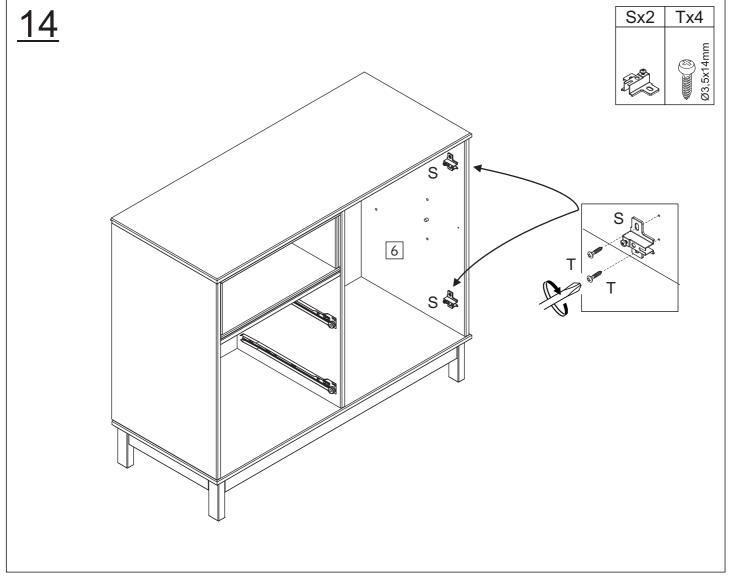


WARNING


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product.


Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.


Drill your wall with a 6mm drill (not included) and insert hardware (N), securing wall anchor (K) gift asher (L) and screw (C) in the wall.


Attach screw (T) into washer (L), securing wall anchor (K) at the under middle part (1).

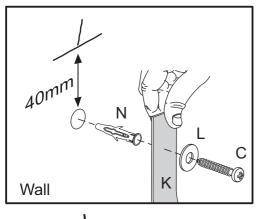

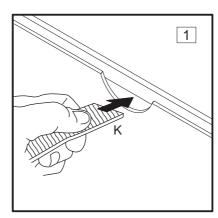


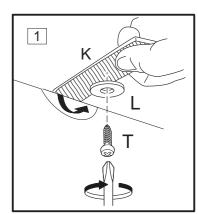


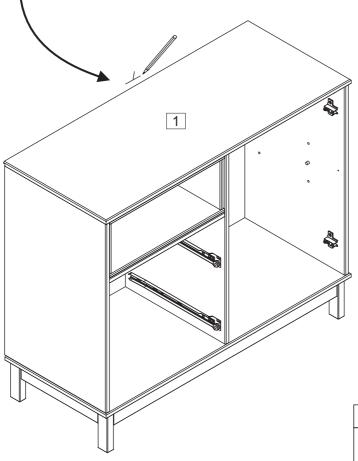


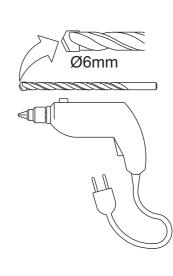



| Cx1 | Nx1 | Kx1 | Lx2 | Tx1 |
|-----|-----|-----|-----|------------------------------------------|
| (2) | | | | (8)))))) (8) (8) (8) (8) (8) (8) (8 |

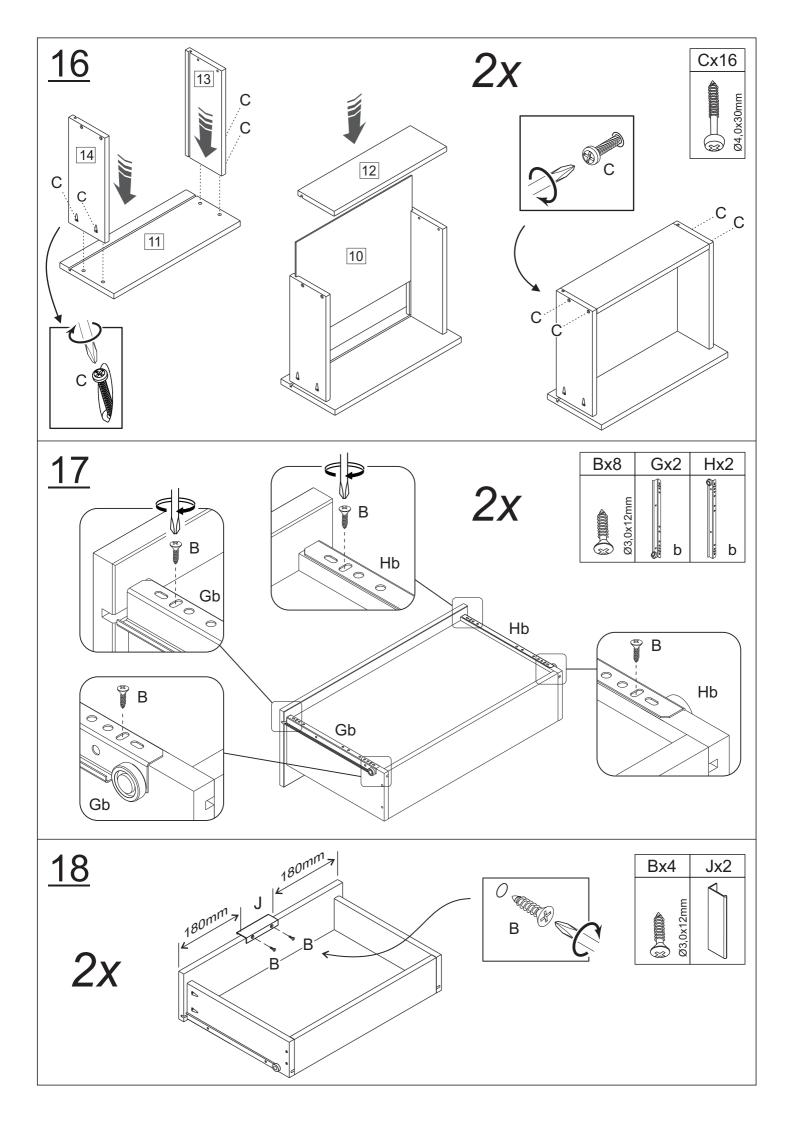

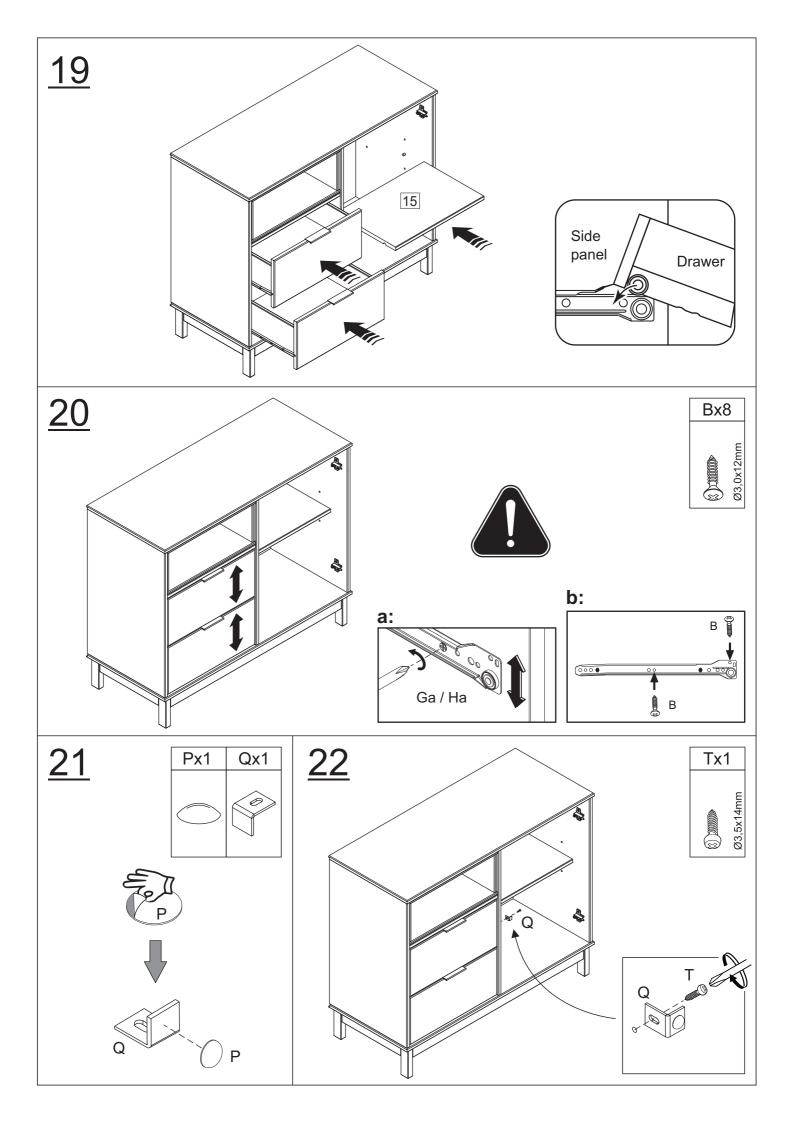

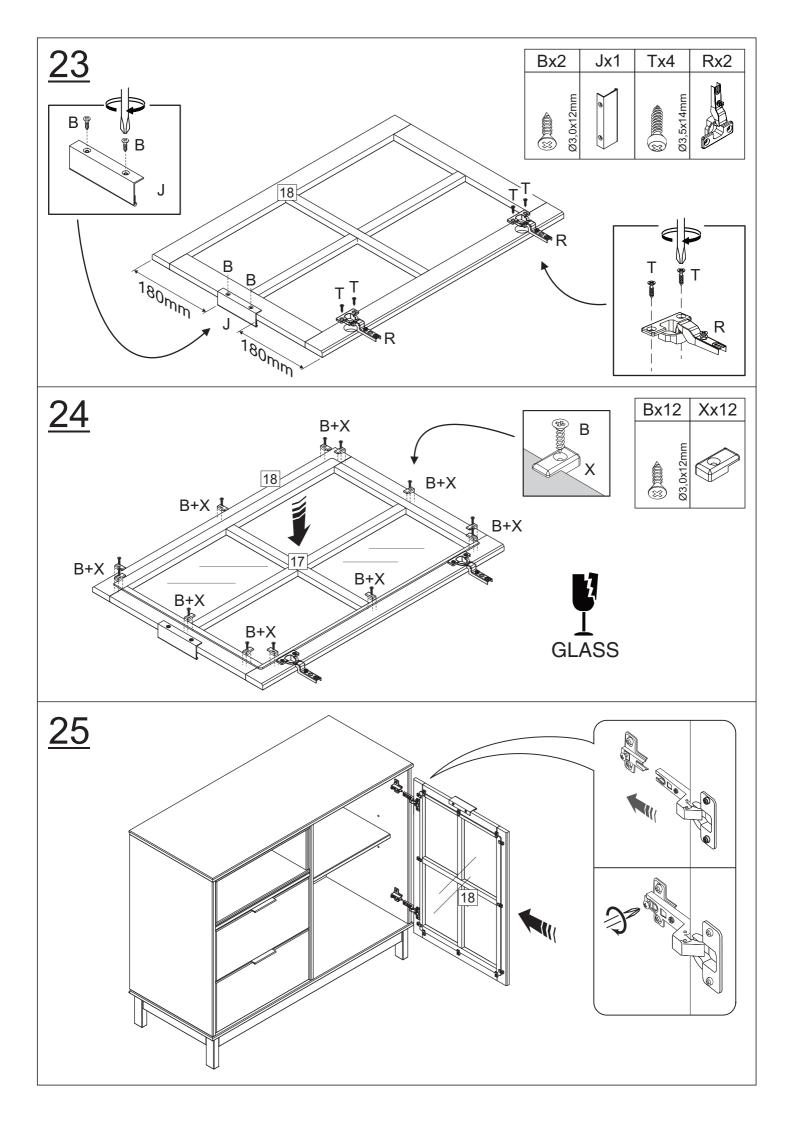

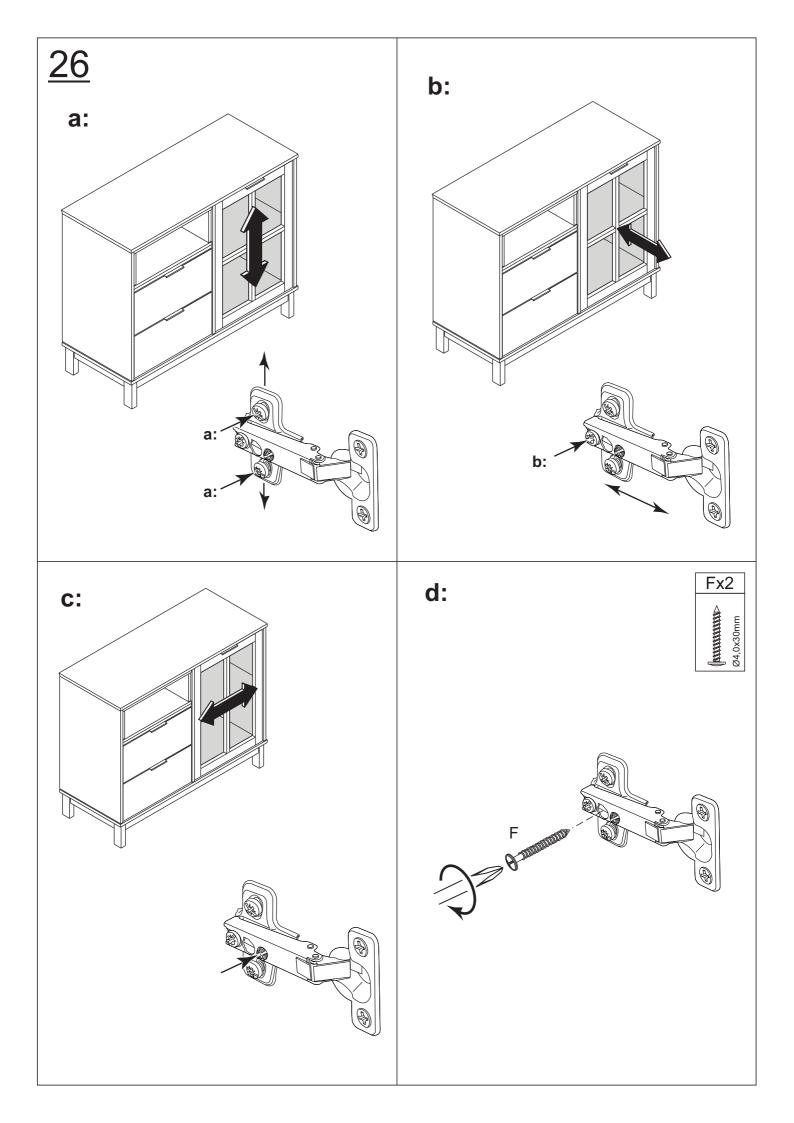

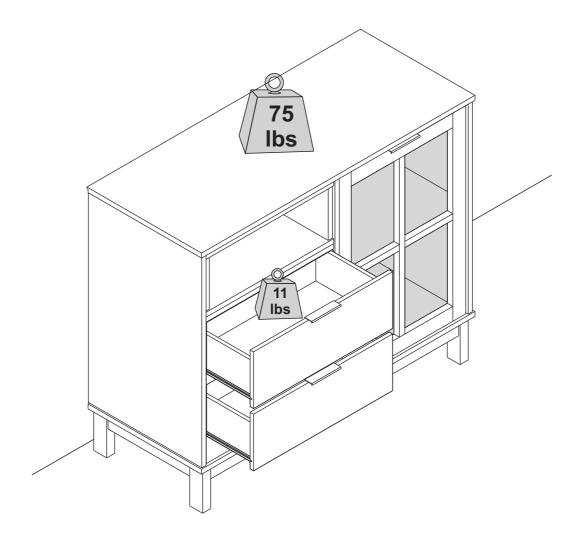

GENERAL CARE & MAINTENANCE

We advise that when cleaning the product that a damp cloth is used.

Avoid the use of all household cleaners and abrasive.

Never push or drag the furniture.

Never attempt to move the furniture when fully loaded.

We advise that periodically all fixing are re-tightened.